
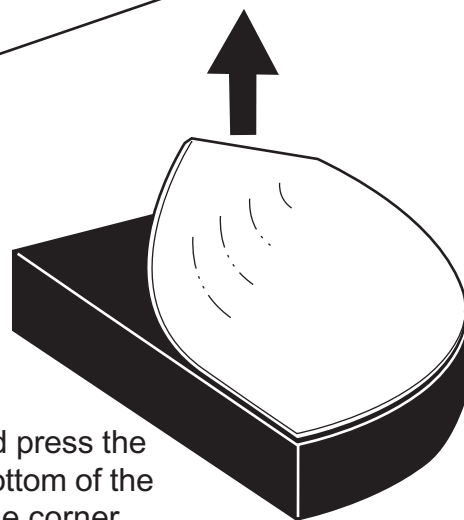


SUPPLEMENT TO INSTALLATION INSTRUCTIONS FOR

OPTIONAL CORNER PADS

If there are gaps between the corner pieces and your truck bed, remove the existing corner pad and replace with thicker corner pads.

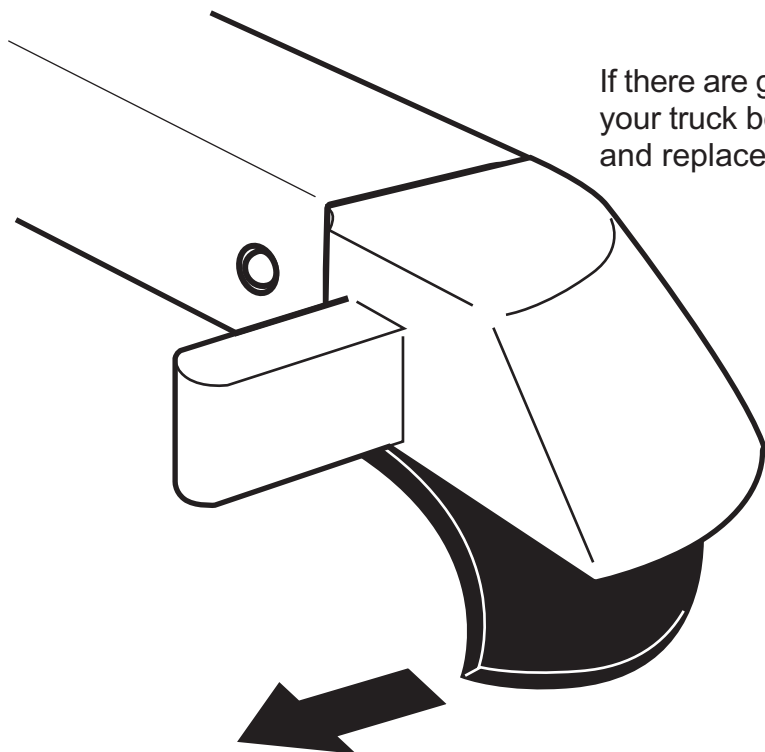

Peel off the paper backing and press the self-adhesive surface to the bottom of the tonno frame corner.